

FF821

Freestanding full height larder fridge

Use and maintenance

Contents:

3	Important information
4	Before first use
5	Important safety notes
7	Fridge use
9	Energy saving tips
11	Fridge layout and storage
12	Control panel layout
13	Setting the temperature
13	Super cool mode
14	Stand-by mode
14	Temperature setting warnings
15	Climate class and meaning
16	Fridge storage and accessories
19	Maintenance, care and cleaning
21	Troubleshooting
25	Installation and ventilation
25	Appliance dimensions
28	Electrical information

Important

CDA cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

Do not use the appliance if the plug, the mains cord or the appliance itself is damaged. If the mains cord is damaged, you must have it replaced by the manufacturer, or an authorised service centre or similarly qualified person in order to avoid a hazard.

Appliance information:

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

Appliance Model	
Serial Number	

EU Declarations of Conformity:


This appliance meets the requirements of all applicable EU directives with the corresponding harmonised standards which provide for CE marking.



WARNING: Risk of fire/flammable materials

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH WEEE DIRECTIVE 2012/19/EU.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin .

Before first use of the fridge

You must allow the fridge to settle for at least five hours prior to switching the power on. The fridge may have an odour to it at first use. This will disappear as the appliance cools.

It is recommended that you clean the interior of the appliance prior to first use, using a solution of bicarbonate of soda and warm water then thoroughly dry the interior.

This appliance has been designed with ease of use in mind but please read the following instructions carefully to ensure you familiarise yourself with the appliance and its operation. This will help you to get the best results and also help to prevent you from being charged for unnecessary service calls.

- This refrigeration appliance is not intended for use as a built in appliance.
- When you first switch on the appliance, you should ideally run it without any contents for the first 24 hours and not open the appliance doors. If you need to use it straight away, try not to put a large quantity of food inside.
- The appliance will work continuously until it comes down to the correct temperature.
- This appliance features a five minute delay function which, after power has been cut and restored or the appliance turned off and on again, allows five minutes to pass before switching the cooling system on again. This is to prevent unnecessary damage to the compressor.
- The climate class for this appliance is T/SN. This means ambient temperatures should not fall below 10°C or exceed 38°C.
- **The 'e' on the display board is always on (except when screen saver is active). THIS IS NOT A FAULT.**

Important safety notes

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children must not play with the appliance.
- Cleaning and user maintenance must not be made by children without supervision.

-
- If the appliance is switched off, you should allow five minutes before switching it on again to prevent unnecessary damage to the compressor.

WARNING - Keep ventilation openings clear of obstruction.

WARNING - Do not use mechanical devices or other means to accelerate the defrosting process.

WARNING - Do not use electrical appliances inside the food storage compartments of the appliance.

WARNING - Do not damage the refrigerant circuit.

WARNING - Do not store explosive substances such as aerosol cans, with a flammable propellant, within this appliance.

- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use at altitudes exceeding 2000 metres.
- This appliance is a household refrigerator and is intended to be used in domestic environments and similar applications such as staff kitchen areas, farm houses and bed and breakfast type environments. It should not be used in commercial environments.
- If your appliance uses R600a as a refrigerant (this information will be provided on the rating plate) you must take care during transportation and installation to prevent the cooling system

elements from being damaged. R600a is an environmentally friendly and natural gas, but is explosive. In the event of a leak due to damage to the cooling system, move your fridge away from open flames or heat sources and ventilate the room in which the appliance is located for 5 minutes.

Fridge use

For normal operating conditions, set the temperature of the cooler compartment to +4 or +6 °C.

- To reduce humidity and avoid the consequent formation of frost, always store liquids in sealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporating liquid and, in time, your appliance will require more frequent defrosting.
- Cooked dishes must remain covered when they are kept in the fridge. Do not place warm foods in fridge, only store them once they are cool, otherwise the temperature/humidity inside the fridge will increase and the fridge's efficiency will be reduced.
- Make sure no items are in direct contact with the rear wall of the appliance as frost will develop and packaging will stick to it. Do not open the refrigerator door frequently.
- We recommend that meat and clean fish are loosely wrapped and stored on the glass shelf just above the vegetable bin where the air is cooler, as this provides the best storage conditions.
- Store loose fruit and vegetable items in the crisper containers.
- Storing fruit and vegetables separately helps prevent ethylene-sensitive vegetables (green leaves, broccoli, carrot, etc.) being affected by ethylenereleaser fruits (banana, peach, apricot, fig etc.).
- Do not put wet vegetables into the refrigerator.

-
- Storage time for all food products depends on the initial quality of the food and an uninterrupted refrigeration cycle before refrigerator storage.
 - Water leaking from meat may contaminate other products in the refrigerator. You should package meat products and clean any leakages on the shelves.
 - Do not put food in front of the air flow passage.
 - Consume packaged foods before the recommended expiry date.

Do not allow food to come into contact with the temperature sensor, which is located in the refrigerator compartment, in order to keep the refrigerator compartment at optimum temperature.

- For normal working conditions, it will be sufficient to adjust the temperature setting of your refrigerator to +4 °C.
- The temperature of the fridge compartment should be in the range of 0-8 °C, fresh foods below 0 °C are iced and rotted, bacterial load increases above 8 °C, and spoils.
- Do not put hot food in the refrigerator immediately, wait for the temperature to pass outside. Hot foods increase the degree of your refrigerator and cause food poisoning and unnecessary spoiling of the food.
- Meat, fish, etc. should be store in the chiller compartment of the food, and the vegetable compartment is preferred for vegetables.
- To prevent cross contamination, meat products and fruit vegetables are not stored together.
- Foods should be placed in the refrigerator in closed containers or covered to prevent moisture and odors.

Tips for saving energy


1. Install the appliance in a cool, wellventilated room, but not in direct sunlight and not near a heat source (such as a radiator or oven) otherwise an insulating plate should be used.
2. Allow warm food and drinks to cool before placing them inside the appliance.
3. Place thawing food in the refrigerator compartment if available. The low temperature of the frozen food will help cool the refrigerator compartment while the food is thawing. This will save energy. Frozen food left to thaw outside of the appliance will result in a waste of energy.
4. Drinks or other liquids should be covered when inside the appliance. If left uncovered, the humidity inside the appliance will increase, therefore the appliance uses more energy. Keeping drinks and other liquids covered helps preserve their smell and taste.
5. Avoid keeping the doors open for long periods and opening the doors too frequently as warm air will enter the appliance and cause the compressor to switch on unnecessarily often.
6. Keep the covers of the different temperature compartments (such as the crisper and chiller if available) closed.
7. The door gasket must be clean and pliable. In case of wear, replace the gasket.

The table below is a quick guide to show you the most efficient way to store the major food groups in your refrigerator compartment.

Food	Maximum storage time	How and where to store
Vegetables and fruit	1 week	Vegetable bin
Meat and fish	2-3 days	Wrap in plastic foil, bags, or in a meat container and store on the glass shelf
Fresh cheese	3-4 days	On the designated door shelf
Butter and margarine	1 week	On the designated door shelf
Bottled products (e.g. milk and yoghurt)	Until the expiry date recommended by the producer	On the designated door shelf
Eggs	1 month	On the designated egg shelf
Cooked foods	2 days	All shelves

NOTE: Potatoes, onions and garlic should not be stored in the refrigerator.

Fridge layout and storage

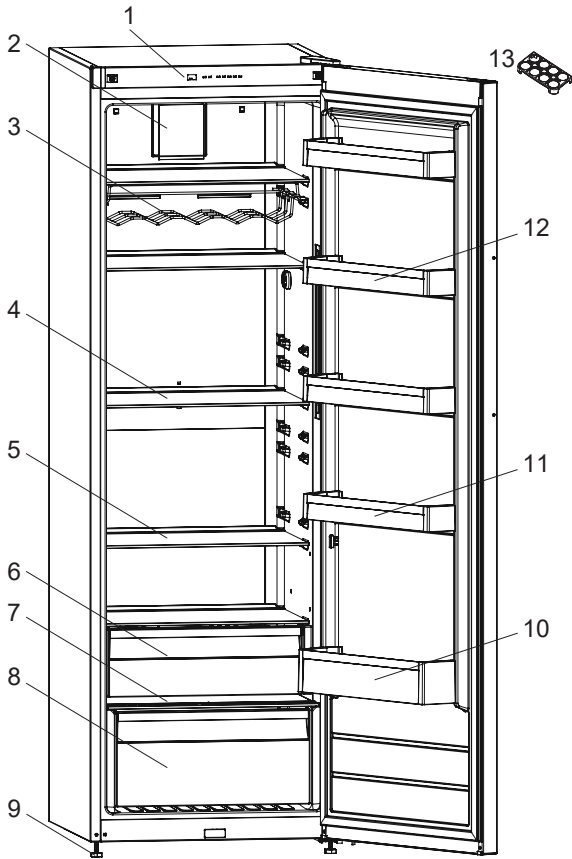


- | | | | |
|----|---------------------|-----|-----------------|
| 1. | Control panel | 6. | Crisper cover |
| 2. | Circulation fan* | 7. | Crisper |
| 3. | Bottle shelf | 8. | Adjustable feet |
| 4. | Fridge shelves | 9. | Bottle shelf |
| 5. | Chiller compartment | 10. | Door shelves |

***IMPORTANT:** Do not block the circulation fan with foodstuffs.

Food types and where to store them within the fridge section:

Vegetables and fruits:	Crisper drawers
Red meat:	Fridge shelves (lower)
White meat & fish:	Fridge shelves (lower)
Cheese:	Door shelves (upper)
Butter and margarine:	Door shelves (upper)
Bottled milk products and yoghurt:	Bottle shelf
Cooked food:	Fridge shelves (upper)

Control panel and usage

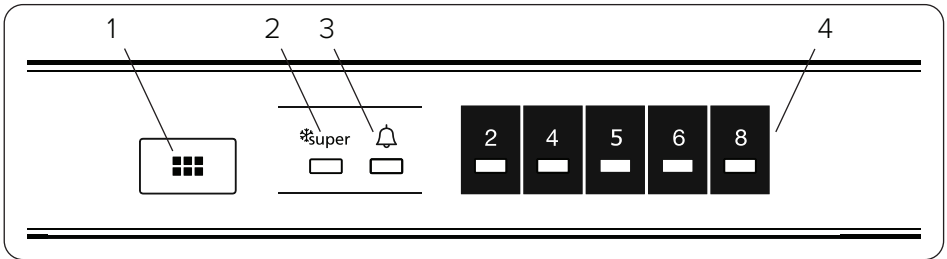

1. Fridge temperature set button
2. Super cooling symbol (Super cooling LED)
3. Alarm symbol (Alarm LED)
4. Fridge adjusted temperature indicator

Please note: The 'e' of the eco mode symbol is always illuminated. This is not a fault.

Setting the temperature

The default temperature for the fridge at first switch on should be 5°C.

To adjust the temperature:

- Press fridge setting button once to increase the temperature.
- Every time you press the button, the temperature will increase. (2 °C, 4 °C, 5 °C, 6 °C, 8 °C, Super cooling)
- Press the fridge setting button until super cooling symbol is displayed on your fridge.
- Once these settings are displayed and no button is pressed within 3 seconds, the super cooling indicator will blink.
- If you keep pressing the fridge setting button, it will restart from last value.

Super cool mode

Super cool mode brings the fridge down to 2°C quickly. We recommend using this function when introducing large amounts of fresh food at once, such as your weekly shop.

To use the super cool mode:

- Press temperature set button until super cooling light comes on.
- Super cooling led will light during this mode.
- For optimal appliance performance in maximum cooling capacity, set the appliance to active super cooling mode 6 hours before you put the fresh food into the fridge.

To cancel the super cool mode:

- Pressing the temperature set button will cancel the mode and the setting will be restored from 2.

Note: The super cooling mode will cancel automatically after 5 hours.

Stand-by mode

Stand-by mode will disable all components, if you the set button is pressed whilst in stand-by mode, all LEDs will blink three times to indicate that stand-by mode is active.

To activate stand-by mode:

- Set “2” set value and push set button until all leds are blink three times.

To cancel stand-by mode:

- Push and hold the set button until the display returns to normal working. After the mode is deactivated, the “Alarm LED” may light on the display because the product may be hot. The “Alarm LED” will turn off when the product reaches normal temperature.

Temperature setting warnings

- Your appliance is designed to operate in the ambient temperature ranges stated in the standards, according to the climate class stated in the information label. It is not recommended that your fridge is operated in the environments which are outside of the stated temperature ranges. This will reduce the cooling efficiency of the appliance.
- Temperature adjustments should be made according to the frequency of door openings, the quantity of food kept inside the appliance and the ambient temperature in the location of your appliance.
- When the appliance is first switched on, allow it to run for 24 hours in order to reach operating temperature. During this time, do not

open the door and do not keep a large quantity of food inside.

- A 5 minute delay function is applied to prevent damage to the compressor of your appliance when connecting or disconnecting to mains, or when an energy breakdown occurs. Your appliance will begin to operate normally after 5 minutes.
- Larders (coolers) do not have any freezer compartments but can cool up to 4 - 6 °C.

Climate class and meaning:

- T (tropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C.
- ST (subtropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C.
- N (temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C.
- SN (extended temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C.
- The Turbo Fan (if available): Do not block the air inlet and outlet openings when storing food, otherwise air circulation provided by the turbo fan will be impaired.

Fridge storage and accessories

Storage box


The storage box can be adjusted and used for 2 different functions.

To use the compartment as a chiller (0 °C):

Move the sliding cover (indicated in the graphic) from the closed position to the open position.

To use for the compartment as a crisper:

Move the sliding cover (indicated in the picture) from the open position to the closed position.

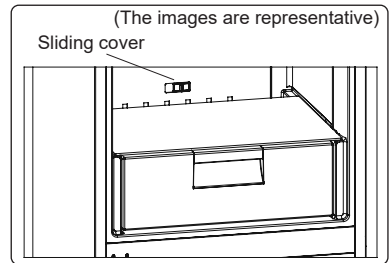


Declared energy consumption and volume are defined according to the chiller option of the product. When this compartment is used as a chiller, food can be stored here to retain the freshness and flavour of food for longer rather than storage inside the freezer or refrigerator.

When the chiller tray becomes dirty, remove it and wash with water. When the chiller shelf is pulled out, the cover will open automatically. The chiller compartment can be used for storing foods such as raw fish, lightly pickled food, rice, and so on.


Note: Do not put food you want to freeze or ice trays (to make ice) in this compartment.

The fresh dial

If the crisper is full, the fresh dial located in front of the crisper should be opened. This allows the air in the crisper and the humidity rate to be controlled, to increase the life of food within. The dial, located behind the shelf, must be opened if any condensation is seen on the glass shelf.

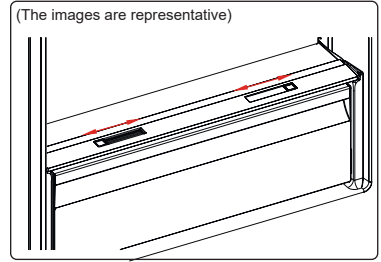


or

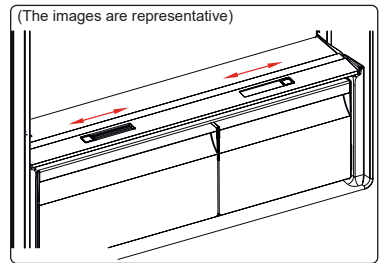

The bottle holder

Use the bottle holder to prevent bottles from slipping or falling over.

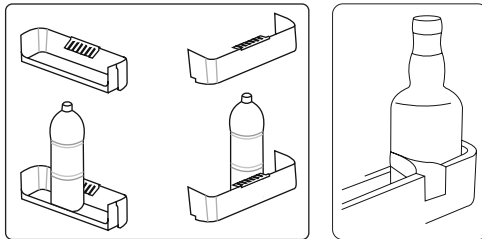

Adjustable door shelving

The door shelving can be adjusted to six different placements to provide the optimal storage layout for your needs.

To adjust the position of door shelf:





- Hold the bottom of the shelf and pull the buttons on the side of the door shelf direction of arrow. (Fig.1) Position door shelf the height you need by moving up and down. After you get the

position that you want the door shelf, release the buttons on the side of the door shelf (Fig.2) Before releasing the door shelf, move up down and make sure the door shelf is fixed.

Note: Before moving door shelf is loaded, you must hold the shelf by supporting the bottom. Otherwise, door shelf could fall off the rails due to the weight. So damage may occur on the door shelf or rails.

Adjustable glass shelf

Adjustable glass shelf mechanism provides higher storage spaces with a simple movement. To cover the glass shelf, push it. You can load your food as you want in the resulting extra space. To bring the shelf in its original position, pull it toward you.

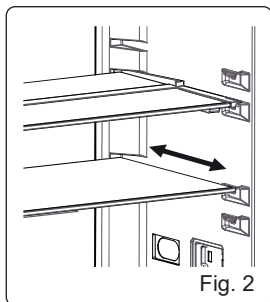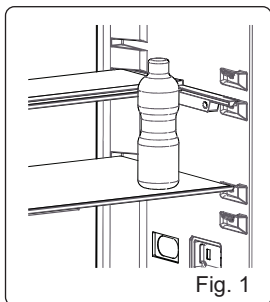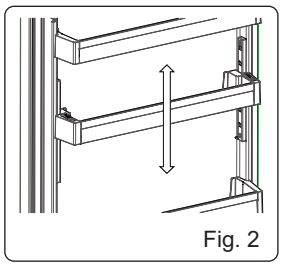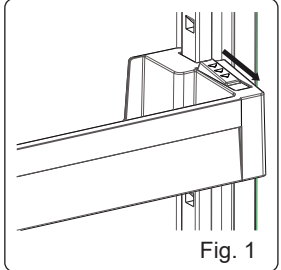


Maintenance, care and cleaning

Always disconnect the appliance from the power before ANY cleaning or maintenance.

- Leave spaces between food items wherever possible to allow air to flow between them. Do not allow food items or containers to touch the rear or side walls of the appliance, nor obstruct the fan.
- Avoid contact of oily or acidic foods with the rear and side walls. Oils and acids can damage the liner material. If any such foods come into contact with the walls, clean the spot with warm water and bicarbonate of soda.
- The refrigerator section should be cleaned using a solution of bicarbonate of soda and lukewarm water. Make sure that no water enters the lamp housing or other electrical components.
- Do not use abrasive products or detergents.
- Clean the shelves and balconies separately by hand, using soap and water. Do not put them in the dishwasher.
- Keep the door seal clean to avoid damage to them and to help to ensure that they continue to function correctly.
- Once cleaning is complete, then reconnect the power.
- If the appliance is not used for prolonged periods of time, unplug and clean it. The doors should be left slightly open to prevent the formation of mildew or odours.
- Where possible, clean the condenser (black grille on the back of the appliance) with a soft bristle brush at least twice a year.

Defrosting

- Your appliance performs automatic defrosting. The water formed as a result of defrosting passes through the water collection spout, flows into the water tray behind your appliance and evaporates there.
- Make sure you have disconnected the plug of your appliance before cleaning the water tray.
- Remove the water tray from its position by removing the screws (if it has screws). Clean it with soapy water at specific time intervals. This will prevent odours from forming.

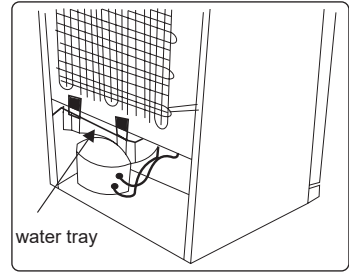


Changing the light bulb

To replace any of the LEDs, please contact the CDA Customer Care department.

- If the appliance is equipped with an LED lamp, this light source is an energy efficiency class <E>.
- If the appliance is equipped with LED Strip(s) or LED card(s), this light source is an energy efficiency class <F>.


Note: The numbers and location of the LED strips may change according to the model.

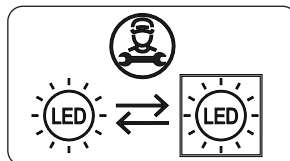

Troubleshooting

If you have any problems with your appliance, you should check the troubleshooting prior to calling CDA Customer Care, to prevent unnecessary service calls and potential cost. Contact details for CDA Customer Care are on the rear cover of this manual.

Your appliance will warn you if the temperature is not within the proper or if a problem occurs with the appliance. In the case of a problem within the appliance, the alarm led will show a red light.

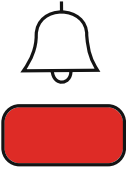Alarm indicator LED is turning on	Meaning	Why	What to do
	"Failure" Warning	There is/are some part(s) out of order or there is a failure in the cooling process. The product is plugged in for the first time or a long-time power interruption for 1 hour.	Check if the door is open, then check if the appliance is working after 1 hour. If the door is not open and the appliance has not worked for 1 hour, contact CDA customer care department for assistance as soon as possible.

If you are experiencing a problem with your appliance, please check the following troubleshooting tables before contacting the CDA customer care department.

CDA Customer Care

Phone: 01949 862 012

Email: customer.care@cda.co.uk

Issue	Check / Explanation
Appliance is not operating	<ul style="list-style-type: none"> • There is power • The plug is correctly placed in the socket • The plug fuse or the mains fuse has blown • The socket is defective. To check this, plug another working appliance into the same socket
Appliance is performing poorly	<ul style="list-style-type: none"> • The appliance is overloaded • The appliance door is closed properly • There is any dust on the condenser • There is enough space near the rear and side walls
Appliance is operating noisily (Cracking noise occurs)	<ul style="list-style-type: none"> • This occurs during automatic defrosting or when the appliance is cooled or warmed (due to expansion of appliance material) and is normal
Appliance is operating noisily (Short cracking noise occurs)	<ul style="list-style-type: none"> • This occurs the thermostat switches the compressor on/off
Appliance is operating noisily (Motor noise)	<ul style="list-style-type: none"> • This indicates the compressor is operating normally • The compressor may cause more noise for a short time when it is first activated and is normal
Appliance is operating noisily (Bubbling noise/splash)	<ul style="list-style-type: none"> • This occurs due to the flow of the refrigerant in the tubes of the system
Appliance is operating noisily (Water flowing noise)	<ul style="list-style-type: none"> • This occurs due to water flowing to the evaporation container and this noise is normal during defrosting
Appliance is operating noisily (Water flowing noise)	<ul style="list-style-type: none"> • This occurs in some models during normal operation of the system due to the circulation of air
The edges of the appliance in contact with the door joint are warm	<ul style="list-style-type: none"> • This may occur during summer (warm seasons) especially, as the surfaces in contact with the door joint may become warmer during the operation of the compressor, this is normal

Issue	Check / Explanation
There is a build-up of humidity inside the appliance	<ul style="list-style-type: none"> • All food is packed properly, containers must be dry before being placed in the appliance • The appliance door is opened frequently - the humidity of the room enters the appliance when the doors are opened and increases faster when the doors are opened more frequently, especially if the humidity of the room is high
The door does not open or close properly	<ul style="list-style-type: none"> • There is food or packaging preventing the door from closing • The door joints are broken or torn • Your appliance is on a level surface • The compressor can run loudly or the noise of the compressor/refrigerator may increase in some models during operating • in some conditions such that the product is plugged in for the first time, depending on change in the ambient temperature or change of usage - this is normal; when the refrigerator reaches the required temperature, the noise decreases automatically

Important! All repairs must be performed by qualified service technicians. The use of engineers not approved by CDA may invalidate any warranty provided.

In the event of your appliance requiring technical assistance and/or spare parts, please contact CDA Customer Care. In this case it is necessary to state all the appliance data on the rating plate, such as model, serial number etc. If the problem is not solved, disconnect the power supply and report the fault.

For more information about the warranty of your product, including terms and conditions, please visit www.cda.co.uk/warranty

Troubleshooting recommendations


- If the appliance is switched off or unplugged, wait at least 5 minutes before plugging the appliance in or restarting it in order to prevent damage to the compressor.
- If you will not use your appliance for a long time (e.g. in summer holidays) unplug it. Clean your appliance according to chapter cleaning and leave the door open to prevent humidity and smell.
- If a problem persists after you have followed all the above instructions, please contact the CDA customer care department.
- The appliance you have purchased is designed for domestic use only. It is not suitable for commercial or common use. If the consumer uses the appliance in a way that does not comply with this, we emphasise that the manufacturer and the retailer will not be responsible for any repair and failure within the guarantee period.

Installation and ventilation

When installing this product we recommend you seek the help of another individual. This product may have some sharp edges. Please take care and wear adequate PPE when handling.

This appliance must never be installed close to heat sources such as heating elements, radiators, ovens and cookers nor installed in damp places or direct sunlight.

Product dimensions

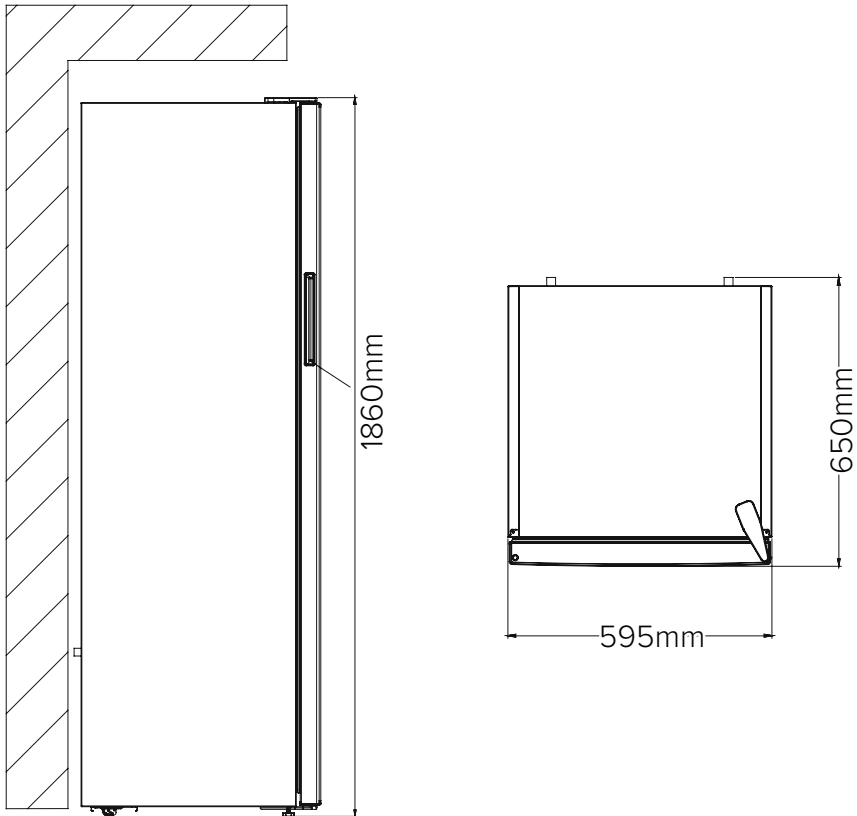


Before using your fridge for the first time, please pay attention to the following points:

The operating voltage for your fridge is 220-240 V at 50Hz.

- The plug must be accessible after installation.
- Your fridge may have an odour when it is operated for the first time. This is normal and the odour will fade when your fridge starts to cool.
- Before connecting your fridge, ensure that the information on the data plate (voltage and connected load) matches that of the mains electricity supply. If in doubt, consult a qualified electrician.
- Insert the plug into a socket with an efficient ground connection. If the socket has no ground contact or the plug does not match, we recommend you consult a qualified electrician for assistance.
- The appliance must be connected with a properly installed fused socket.
- The power supply (AC) and voltage at the operating point must match with the details on the name plate of the appliance (the name plate is located on the inside left of the appliance).
- We do not accept responsibility for any damages that occur due to ungrounded usage.
- Place your fridge where it will not be exposed to direct sunlight.
- Your fridge must never be used outdoors or exposed to rain.
- Your appliance must be at least 50 cm away from stoves, gas ovens and heater cores, and at least 5 cm away from electrical ovens.
- If your fridge is placed next to a deep freezer, there must be at least 2 cm between them to prevent humidity forming on the outer surface.
- Do not cover the body or top of fridge with lace. This will affect the

performance of your fridge.

- Clearance of at least 150 mm is required at the top of your appliance. Do not place anything on top of your appliance.
- Do not place heavy items on the appliance.
- Clean the appliance thoroughly before use (see Cleaning and Maintenance).
- Before using your fridge, wipe all parts with a solution of warm water and a teaspoon of sodium bicarbonate. Then, rinse with clean water and dry. Return all parts to the fridge after cleaning.
- Use the adjustable front legs to make sure your appliance is level and stable. You can adjust the legs by turning them in either direction. This must be done before placing food in the appliance.
- Install the plastic distance guide(s) on the condenser (black vanes at the rear of the appliance) by turning it 90° (as shown in the figure) to prevent the condenser from touching the wall.
- The distance between the appliance and back wall must be a maximum of 75 mm.

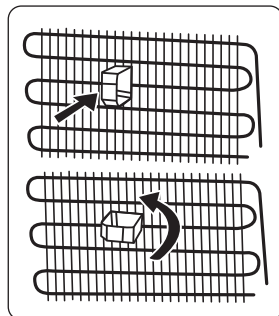

Electrical information

Warning! This appliance must be earthed. The mains lead of this appliance has been fitted with a specially earthed plug.

Important: Do not use the appliance without the fuse cover in position. Should the fuse need to be replaced, it must be replaced with a 13A fuse, ASTA approved to BS1362.

The plug must be used with a specially earthed socket of 13 amperes. If there is no such socket in your house, please have one installed by an authorised electrician. If in doubt regarding the electrical connection of this appliance, consult a qualified electrician. Do not shorten the supply cable, the appliance may require removal for servicing.

N.B. Ensure that the plug socket is situated in an easily accessible place. If the power supply cable or plug is damaged, it must be replaced by a CDA authorised agent. If the plug socket does not match the refrigerator plug, it must be replaced by the manufacturer or an authorised service agent in order to avoid a hazard.


WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

WARNING: Do not use plug adapters with this appliance.

The mains lead of this appliance has been fitted with a BS 1363A 13A fused plug. To change a fuse in this type of plug, follow the steps below:

1. Remove the fuse cover and fuse.
2. Fit replacement 13A fuse, ASTA approved to BS 1363A to the fuse cover.
3. Replace fuse cover.

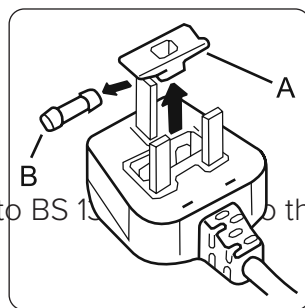

During usage

- Do not connect your fridge to the mains electricity supply using an extension lead.
- Do not use damaged, torn or old plugs.
- Do not pull, bend or damage the cord.
- Do not use plug adapter.
- This appliance is designed for use by adults. Do not allow children to play with the appliance or hang off the door.
- Never touch the power cord/plug with wet hands. This may cause a short circuit or electric shock.
- Do not place explosive or flammable material in your fridge. Place drinks with high alcohol content vertically in the fridge compartment and make sure their tops are tightly closed.

When the door of the fridge is closed, a vacuum seal will form. Wait for 1 minute before reopening it. This application is optional for easy opening of the door. With this application, a little condensation may occur around this area and you may remove it.

Notes

Notes



For service or queries relating to your product please contact:

The Customer Care Department on **01949 862 012** or email **customer.care@cda.co.uk**

For more information please contact:

The Sales Department on **01949 862 010** or email **sales@cda.co.uk**

Customer Care Department. The CDA Group Ltd, Harby Road, Langar, Nottinghamshire, NG13 9HY
T: 01949 862 012 **F:** 01949 862 003 **E:** customer.care@cda.co.uk