

# ka30, ka32, ka80 and ka82 Stainless Steel Sinks Installation

## Installation

### **Before Installation**


Offer up the sink to the worktop and/or the cabinets to confirm that the external dimensions of the bowls are compatible with the cabinets themselves.

Confirm that with the sink in position:

- There is adequate space to install any taps or other required accessories.
- There is adequate space to install the waste pipework and that any necessary modification to internal shelves to accommodate the waste (and trap) is acceptable.
- Access to any water stop-cock or other services will still be adequate after the installation.


#### Installation


- Refer to the cut-out sizes on the back of this manual and use them to mark out where the worktop needs to be cut. Double-check the dimensions before cutting the worktop aperture.
- After cutting out the worktop aperture, we recommend you seal the cut edges with silicone (or similar) sealant to help prevent ingress of water.
- Position the supplied gasket around the perimeter of the hole (Fig. 1).
- It is often easier to mount the taps, waste-fitting and overflow onto the sink prior to fitting the sink to the worktop.
- Ensure that the external edge of the sink is positioned on the gasket, to

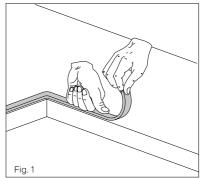

create a barrier to the ingress of water and other items between sink and worktop.

  After positioning the sink on the worktop, position the fixing brackets as shown in Fig. 2, then tighten their screws.



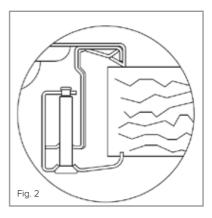


tightened just enough to clamp down on the worktop and no more.

- After fixing, remove any excess gasket material with a suitable cutter.
- We recommend a thin bead of silicone sealer is applied around the perimeter as added protection against water ingress.
- The taps, waste-fitting and overflow can now be mounted onto the sink (if not already done) and fully connected to their respective services.
- To check the waste for leaks, close the plug/basket of the waste fitting, open the tap and fill the sink to the level of the overflow; turn off the tap and wait several minutes to verify that the water doesn't drain away.
- Empty the sink.

After fitting, ensure that the enclosed "Stainless Steel Sinks Use and Maintenance" guide is retained for the customer and/or user of the sink.

E & O E. All instructions, dimensions and illustrations are provided for guidance only. CDA reserve the right to change specifications without prior notice.

### **Cut-Out Dimensions**

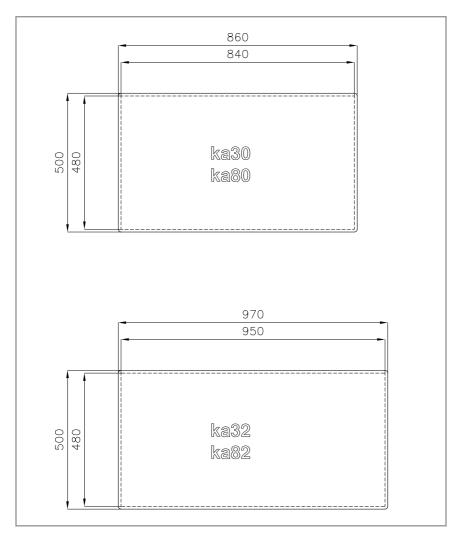

Please contact our **Customer Care Department** for Service on the details below

#### **Customer Care Department**

The ICIDIAI Group Ltd. • Harby Road • Langar • Nottinghamshire • NG13 9HY T : 01949 862 012 F : 01949 862 003 E : customer.care@cda.eu