



# CI860 Freestanding Washer Dryer 8 + 6kg, 1400 Spin

Manual for Installation, Use and Maintenance

## Important

This appliance must only be used for the purpose for which it is intended, i.e. domestic use. Any other use could be dangerous and may lead to premature failure of the appliance.

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

### **Appliance information:**

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

<b>Appliance Model</b>	
<b>Serial Number</b>	

### **CE Declarations of Conformity:**

This appliance has been designed, constructed and marketed in compliance with safety requirements of EEC Directive 2006/95/EEC (Low voltage) and requirements of EMC Directive 2004/108/EEC.

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 

## Safety Warnings

- If the plug or cord is damaged, do not connect the appliance to the mains power supply. If the cord is damaged it should be replaced by the manufacturer or appointed service agent in order to avoid a hazard.
- To remove the plug from the socket, pull on the body of the plug, not the cable.
- Do not plug the appliance in to the mains power supply with wet or damp hands.
- Never touch the appliance with wet hands or feet.
- Never open the detergent drawer when a programme is running.
- Never force the appliance door open when a programme is running.
- Since the appliance can reach high temperatures while running, do not touch the drain hose or drained water during draining.
- In case of any failure, first unplug the appliance and close the water tap.
- Repair on this appliance should only be undertaken by suitably qualified personnel.
- Keep the packing materials away from children to prevent risk of injury.
- Do not let children play with the washer dryer.
- Keep pets away from the appliance.
- The appliance should not be installed on carpeted surfaces as this can block the air ventilation on the base.

# Warnings

To avoid the risk of fire, electric shocks, injury or damage when using your washer dryer, please take the following precautions:

- Please read all the instructions before using the washer dryer.
- Do not wash items that have previously been cleaned, washed, soaked or treated with petrol, solvents for dry cleaning, other inflammable substances or explosives, as they produce fumes that could catch fire or explode.
- Do not add petrol, solvents for dry cleaning or other inflammable or explosive substances to the wash water as they produce fumes that could catch fire or explode.
- Do not repair or replace any part of the washer dryer or try to carry out any type of servicing unless it is recommended in the maintenance instructions in the manual.
- Do not climb onto the machine or stand on the open porthole door.
- Do not use an extension lead or adaptor to connect your washer dryer to the mains supply.
- Follow the washing instructions recommended by the manufacturer of the garment to be washed.
- Do not turn your washer dryer on until you are sure that it has been installed in accordance with the installation instructions and all the water, drainage, mains electricity and earth connections meet the local regulations and/or other applicable regulations.

**Important: Ensure that the transit bolts have been removed prior to using the machine.**

# Recommendations

- Residues of detergent or softener left in the detergent drawer for long periods will dry and stick to the detergent drawer. To prevent this put the detergent and softener into the detergent drawer just before washing.
- It is recommended that the pre-wash programme should only be used for very dirty clothes.
- Do not exceed the maximum loading capacity.
- When the machine is not in use, keep the water tap closed.
- The appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the appliance is not to be used for prolonged periods of time, unplug the appliance, close the water tap and leave the door ajar to keep the inside of the machine dry and to prevent unpleasant odours from developing.
- As a result of the quality control procedures during production, a certain amount of water may remain in the appliance. This is normal and does not signify a fault.
- Do not remove the rating plate. The information on it is important.
- This appliance should not be installed in locations where the ambient temperature may fall below 0°C. Use in ambient temperatures below 0°C may damage the machine.

# Before First Use

When your washer dryer has been correctly installed, we recommend that you pre-clean the machine.

This is to check that the installation, the connections and the drainage are all correct, and to thoroughly clean the inside of the washer dryer before any wash programmes are run.

Prior to pre-cleaning you should ensure the transit bolts have been removed.

- Select the Cotton 90°C programme and add a normal dose of detergent into the detergent dispenser.
- Press the “Start” button.

## Preparing Garments for Washing

- Wash lightly soiled garments using a short programme.
- Use a programme without prewash for medium-soiled garments.
- Wash heavily soiled garments using a long programme with prewash.
- Wash white and coloured loads separately.
- We recommend that small garments are placed in a wash bag.
- We recommend using the delicate programmes for sensitive fabrics.
- Separate clothes according to their types (cotton, synthetic, sensitive, woollen, etc.), required washing temperatures and level of soiling.
- Since new coloured clothes may shed dye on the first wash, wash them separately.
- Remove any metal pieces found on the items to be washed, for example curtain hooks.

- 
- Fasten all zips and buttons.
  - Turn garments, such as knitted fabrics, inside out.
  - Before placing the clothes in the drum, make sure all the pockets are empty. Any small objects may block the drain pump.
  - We recommend loading the washer dryer to its full capacity for best water and energy efficiency.
  - Whenever possible, we recommend that you wash garments of different sizes within the same wash programme. This improves the washing action and also aids the correct distribution of the garments in the drum when spin-drying, and the washer dryer will therefore be quieter.

# Detergents and Additives

Your washer dryer's detergent dispenser has three compartments, marked with symbols.




For prewash detergent



For main wash detergent



For fabric conditioner, starch or other additives.

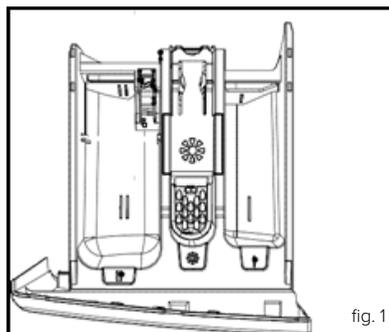


Add the required amount of detergent and fabric softener into the specific sections of the detergent dispenser before starting the wash programme.

For loads that require pre-washing, add  $\frac{1}{4}$  of the required detergent into the prewash section, and the remainder to the main detergent section.

Do not exceed the MAX level in the fabric softener section and ensure that concentrated fabric softeners are diluted before use for best washing results.

## Liquid Detergent

- Liquid detergent may be used in your washer dryer by using the liquid detergent adaptor.
- Any programs that don't include pre-wash may be run with liquid detergent.
- Plug the liquid detergent adaptor into the second compartment of the detergent drawer and add the quantity liquid recommended by the detergent manufacturer.
- Do not fill the liquid detergent adaptor above the "Max" mark.
- Remove the liquid detergent adaptor when using powder detergent in the washer dryer again.

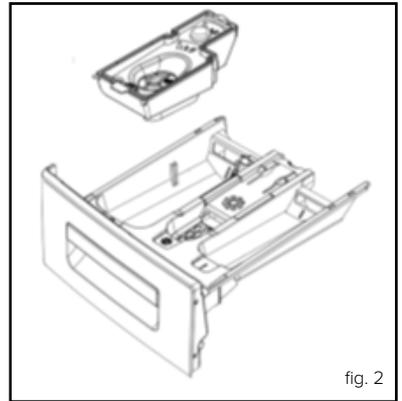

Remember that the amount of detergent to be used will always depend on:

- The amount of clothes to be washed.
- How heavily the clothes are soiled.
- The hardness of the water (Information on water hardness in your area can be obtained from your local water board).

We recommend the use of a decalcifying product if the water hardness is high in your area.

Liquid detergent should not be used on programmes with a prewash stage or when using the delay timer.

---

## Eco Note


The use of more detergent than necessary will not improve your washing results, and will have a negative effect on the preservation of the environment.

We therefore recommend you follow the detergent manufacturer's instructions.

## Loading the Washer Dryer

- Open the door.
- Add the items to be washed separately, ensuring they are loaded evenly.
- When closing the door, ensure that no item is trapped between the door and the door seal.
- Close the door securely, otherwise the programme will not start.

# Control Panel

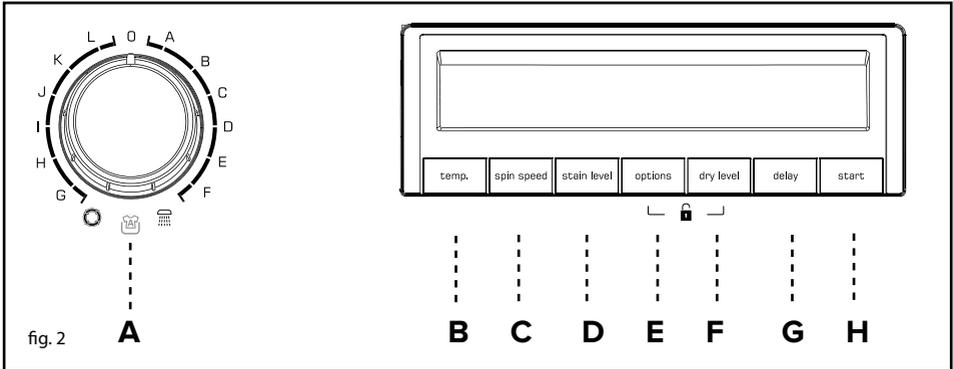

**A Programme selector knob**

**B Temperature button**

**C Spin speed button**

**D Stain level button**

**E Options button (prewash, extra rinses or anti-allergenic rinsing)**

**F Dry level button**

**G Delay button**

**H Start button**

# Starting a Wash Programme

- Turn the “Programme selector” knob to the required programme.
- Select the required adjustments and additional functions using the buttons “B” to “G” in fig 2. as detailed below.
- Press the “Start” button.

When a wash programme is in progress, the programme can be paused by pressing the “Start” button at any time. To restart the programme, press the “Start” button again.

## Programme selection

To select a programme, turn the “Programme Selector” knob to the required programme, as detailed in the programme listing below and also on the detergent dispenser. The knob may be rotated in either direction. The display will show the features of the programme.

## Wash temperature selection

When a programme is selected the machine will automatically choose the maximum wash temperature available for that programme, as shown in the programme listing below.

You can change the wash temperature, if required, by pressing the “Temperature” button a number of times.

If you miss the temperature you want you can come back round to it again by pressing a few more times.

## Spin speed selection

When a programme is selected the machine will automatically choose the maximum spin speed available for that programme, as shown in

the programme listing on pages 20 & 21.

You can change the spin speed, if required, by pressing the “Spin speed” button a number of times.

If you miss the speed you want you can come back round to it again by pressing a few more times.

## **Extra functions**

Extra functions can be selected once the programme has been set. To select any extra function, press the required extra function button. The programme tables on pages 20 - 22 show the functions available for each programme. The programme time shown on the display will reduce or increase, according to the extra functions selected.

## **Stain level selection**

Stain levels can be selected so the machine adjusts the cycle time and temperatures to reflect the level of soil on the load.

Certain programmes have the stain level preset and you can adjust these by pressing the “Stain level” button a number of times.

If you miss the Level you want to specify you can come back round to it again by pressing a few more times.

## **Prewash**

This function adds a prewash to the programme. When this function is selected detergent must be added to the prewash section of the detergent dispenser, in addition to the detergent in the main detergent section.

Press the “Options” button until the prewash symbol  lights in the display.

Note: If the prewash symbol  does not display on the screen it is because the prewash function is not available for the programme selected.

Note: Prewash is not available for selection at the same time as extra rinses or the anti-allergy option.

## Extra rinses

This function adds up to 3 extra rinse cycles to the programme, which is ideal for large loads and garments belonging to people with sensitive skin. Please note: this function will increase the water consumption.

Press the “Options” button until the one extra rinse symbol  shows in the display.

Press the “Options” button again to select 2 extra rinses, the display will show  ,

Press the “Options” button again to select the maximum of 3 extra rinses, the display will show  .

Note: Extra rinses are not available for selection at the same time as prewash or the anti-allergenic rinsing function.

## Anti-allergenic rinsing function

Press the “Options” button again to activate the anti-allergenic rinsing

function. The display will show . In this setting the machine rinses the washing in hot water: Note that the energy consumption of the machine increases when this function is used.

When the “Options” light is not illuminated this means that extra rinse functions are not available with the programme selected.

Refer to the programme list on pages 20 & 21 for details of extra rinse options available for each programme.

Note: Anti-allergenic rinsing is not available for selection at the same time as extra rinses or the prewash option.

## Dry level

Note: The maximum weight of laundry for drying is not always the same as the maximum weight of laundry for washing: If washing more than the maximum drying weight the machine must be stopped and the load split into two before drying.

The level of drying performed by the machine can be set using the “Dry level” button. There are up to three drying level options depending on the programme chosen; alternatively drying can be set to run for a defined time, either 30, 60 or 120 minutes.

## To set drying level

You can change the drying level, if required, by pressing the “Dry Level” button a number of times.

If you miss the level you want you can come back round to it again by pressing a few more times.

Level 1 ( showing on the display) is recommended for washing that is to be ironed.

Level 2 ( showing on the display) is recommended for washing that needs final hanger drying.

Level 3 ( showing on the display) is recommended for washing that is to be folded and put away straight after the programme.

The choice of drying level is determined partially by the dry weight of laundry being dried, as this table:

Drying Level	Laundry Dry Weight		
	1 - 2 kg	3 - 4 kg	5 - 6 kg
Level 1	Recommended	Recommended	Recommended
Level 2	Not Recommended	Recommended	Recommended
Level 3	Not Recommended	Recommended	Recommended

## To set drying time

You can set the drying time, if required, by continuing to press the “Dry Level” button a number of times after cycling through the dry level options.

---

Note: If you choose to set a defined drying time this will automatically be at the default drying level for the programme selected.

Refer to the drying programme list on page 22 for details of drying options available for each programme.

### **Delay timer**

A delay of up to 23 hours can be set before the start time for the programme, in half hour increments to allow the wash programme to start at a convenient time.

The “Delay” function is not available for the “Spin” programme.

To set the delay timer:

- Press the “Delay” button. “0.5h” will show on the display.
- Pressing the “Delay” button again increases the delay by 30 minutes for each press, up to the maximum of 23 hours.
- Once the required time delay is shown on the display, the washer dryer will set after approximately three seconds delay.

To cancel the time delay function after pressing the “Start” button:

It is only necessary to press the “Delay” button once and the machine will start its programme.

### **Start**

Press the “Start” button to start the selected wash programme running, the indicator light stays on. If this is pressed again while the machine is running a programme the washer will pause and the indicator light will flash.

## **Cancelling a programme**

If you need to cancel a programme after it has started running:

- Switch the “Programme selector” knob to the “0” position: The machine will stop its washing operation.
- To discharge any water in the machine turn the “Programme selector” knob to any other programme: The water will be discharged and the machine will stop without running that programme.

## **Key Lock**

The key lock function ensures that the programme will not be affected if any buttons are pressed accidentally.

The lock function should be activated after the wash programme has been selected together with any extra functions.

To activate the key lock, press and hold “Options” and “Dry level” buttons together for five seconds.

To deactivate the key lock, press and hold “Options” and “Dry level” buttons together again for five seconds.

## **Power Cuts**

- If there is a power cut, when the electricity comes back on the washing programme will continue to run from where it stopped.

# Programme Listing

The table below shows the extra functions and temperatures available for each wash programme.

		Wash Temperature Options										Max Wash Load (Dry kg)	Detergent Compartment	Programme Duration (Min)
Index	Programme	Cold	30	40	40e	50	60	60e	70	80	90			
A	Whites	A	A	A		A	A		A	A	P	8	2	215
B **	Cotton Eco	A	A	A	A		A	P				8	2	220
C	Eco 20°C	P										4	2	105
D	Synthetics	A	A	P								3.5	2	135
E	Wool	A	P									2.5	2	55
F	Duvet	A	A	P								2.5	2	105
	Rinse	P										8	N/A	50
	Anti-allergenic	A	A	A		A	P					4	2	180
	Spin	P										8	N/A	20
G	Rapid 15 min	A	P									2	2	15 *
H	Daily 60 min	A	A	A		A	P					2 / 4	2	30 / 60
I	Gentle Dry	N/A										N/A	N/A	60
J	Cotton Dry	N/A										N/A	N/A	60
K	Quick Wash & Dry	A	P									0.5	2	33
L	Cotton Wash & Dry	A	A	A		A	P				A	6	2	285

\* Programme time may increase if the machine detects an unbalanced load.

**Note:** The actual water temperature may differ from the declared cycle temperature.

\*\* Programme for wash and energy consumption assessment in accordance with standard EN60456.

Index	Laundry Type	Preset Spin Speed	Preset Stain Level	Alternative Stain Levels	Prewash ***	Rinse Options ***
A	Cottons & linens (Maximum 4kg for towels)	1400	Medium	Low, High	A	1, 2, 3, A
B **	Cottons & linens (Maximum 4kg for towels)	1400	Medium	Low, High	A	1, 2, 3, A
C	Cottons & linens (Maximum 2kg for towels)	1400	Low			1, 2, 3, A
D	Synthetic mixed textiles	800	High	Low, Medium	A	1, 2, 3, A
E	Machine washable woollens	600	Low	Medium, High		1, 2, 3, A
F	Machine washable duvet (Max 2.5kg)	800	Low	Medium, High	A	1, 2, 3, A
	Any laundry for rinsing	1400	Low			1, 2, 3, A
	Mildly soiled cottons, coloured and linens: Baby clothes	800	Medium			Anti-allergenic
	Any laundry for spinning	1400	Low			
G	Cottons, coloured and linens (Less detergent required)	800	Low			
H	Cottons, coloured and linens	1400	Medium	Low		
I	Laundry with machine dryable label	N/A	Low			
J	Cotton laundry with machine dryable label	N/A	Low			
K	Machine dryable cottons, colours and linens	800	Low			
L	Machine dryable cottons & linens (Maximum 4kg for towels)	1400	Low		A	1, 2, 3, A

P – preset A – available option function  – function not available

\*\*\* Prewash and rinse options cannot be selected together.

# Drying Programme Listing

Index	Programme	Laundry Type	Max Drying Load (Dry kg)	Default Dry Level *	Dry Level Options **	Dry Time Options (Minutes) **
A	Whites	Cottons & linens (Maximum 4kg for towels)	6	1	2, 3	30, 60, 120
B **	Cotton Eco	Cottons & linens (Maximum 4kg for towels)	6	1	2, 3	30, 60, 120
C	Eco 20°C	Cottons & linens (Maximum 2kg for towels)	4	1	2	30, 60, 120
D	Synthetics	Synthetic mixed textiles	3.5	1	2, 3	30, 60, 120
E	Wool	Machine washable woollens				
F	Duvet	Machine washable duvet (Max 2.5kg)				
	Rinse	Any laundry for rinsing	6	1	2, 3	30, 60, 120
	Anti-allergenic	Mildly soiled cottons, coloured and linens: Baby clothes	4		1, 2	30, 60, 120
	Spin	Any laundry for spinning	6	1	2, 3	30, 60, 120
G	Rapid 15 min	Cottons, coloured and linens (Less detergent required)	2	1		30, 60, 120
H	Daily 60 min	Cottons, coloured and linens	4	1	2	30, 60, 120
I	Gentle Dry	Laundry with machine dryable label	3.5	1	2, 3	30, 60, 120
J	Cotton Dry	Cotton laundry with machine dryable label	6	1	2, 3	30, 60, 120
K	Quick Wash & Dry	Machine dryable cottons, colourds and linens	0.5	1		
L	Cotton Wash & Dry	Machine dryable cottons & linens (Maximum 4kg for towels)	6	3		

P – preset A – available option function  – function not available

\* Default level IF an additional drying option is selected.

\*\* Optional drying level and defined drying time cannot be selected together.


# Care and Maintenance

**Before beginning any care or maintenance you should always disconnect the appliance from the electricity supply, and also turn off the water supply.**

**If a programme has been run recently, wait for the water in the appliance to cool down to prevent risk of scalding.**

## Water inlet filters

There are filters on the tap side of the water inlet hose and at the end of the water inlet valve. These filters prevent ingress of dirt or foreign objects into the machine through the water supply. These filters should be cleaned approximately once a year to ensure there is no interruption in the water supply to the machine.

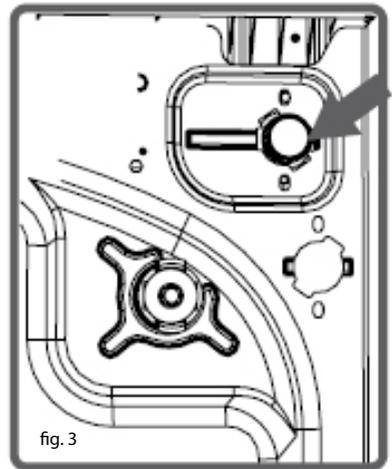

- Remove the water inlet hose.
- Remove the filter on the water inlet valve using pliers.
- Remove the filter on the tap end of the water inlet hose manually, as well as the seal.
- Clean the filters thoroughly using a brush.
- Replace the filters and seals carefully, in the same way as they were removed.

# Pump Filter



The pump filter system prevents ingress of lint or foreign objects into the drain pump, reducing the risk of damage.

The pump filter should be cleaned regularly, every two to three months at least.

**To avoid injury, do not carry out this operation when the wash water is at a temperature over 30°C**

## To clean the filter:

- Open the pump cover by levering it out using the detergent spade or similar plastic item (fig. 4).
- Place a container under the filter cover to collect any remaining water draining from the machine.
- Loosen the filter cover by turning it slowly anti-clockwise until the remaining water has drained away.
- It may be necessary to reseal the pump cover and empty the container to prevent the container from overflowing.
- When all the water has drained out of the machine, turn the filter cover several times until the filter can be completely removed.
- Remove any objects caught in the filter and the drain pump.

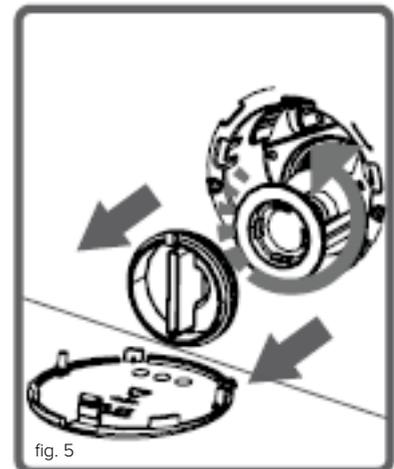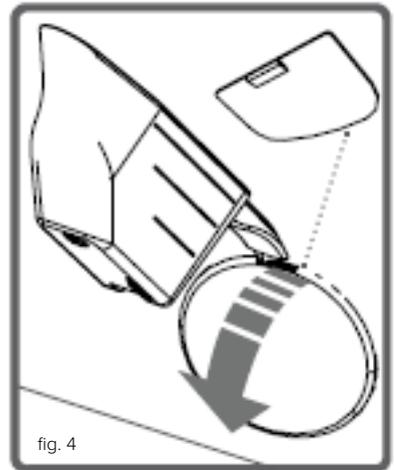

- Refit the filter by turning it clockwise.
- Replace the filter cover.


**Please note** - failure to replace the filter cover properly will cause water to leak from the machine.

## Detergent Drawer

Detergents may cause residue build up in the detergent drawer and the drawer housing over time. The drawer should be cleaned regularly to remove these residues.

To remove the drawer:

- Pull the drawer out until it stops.
- To remove the drawer, press down on the syphon lid inside the drawer and remove from the housing (fig. 6).
- Wash the drawer and syphon lid using warm water and a brush, ensuring all compartments are clean.
- Dry the drawer thoroughly and replace the syphon lid properly.
- Remove the residues from the drawer housing without letting them fall into the machine.
- Replace the detergent drawer inside the housing, reversing the steps above.

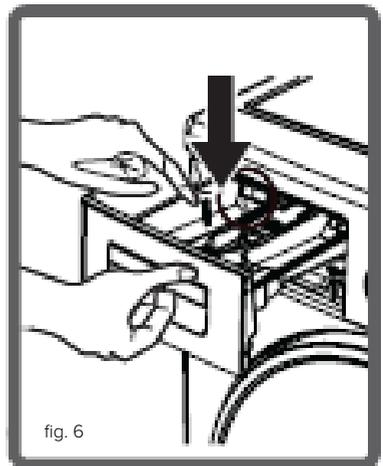

**Please note** - A dirty syphon will prevent the detergents from being taken in, and leave water inside the detergent drawer compartments at the end of wash.

---

## Cleaning the Washer Dryer Exterior

The exterior of the washer Dryer should be cleaned with warm soapy water or a gentle cleaning agent. Do not use abrasive cleaning products or solvents.

It should then be dried thoroughly with a soft cloth.

**Please note** - wipe any detergent spills immediately to minimise the risk of damage to the washer dryer exterior.

## The Drum

Do not leave metal objects such as coins inside the drum, as these can cause the formation of rust stains.

To remove rust stains, use a chlorine free cleaner and follow the manufacturer's warnings for the cleaner.

Never use abrasive products, such as scourers, to remove rust stains.

## Limescale Removal

If proprietary limescale removers are required, follow the manufacturer's warnings for the limescale remover.

**Please note** - Limescale removers contain acids which may affect the colour in clothes, as well as damaging the appliance.

## Practical Information

**Alcoholic beverages:** The stain should first be washed with cold water, then wiped with glycerine and water and be rinsed with water mixed with vinegar.

**Shoe Polish:** The stain should be slightly scratched without ruining the cloth, rubbed with detergent and rinsed. In case it is not eliminated, it should be rubbed with 1 part of pure alcohol (96 degrees) mixed in 2 parts of water and then washed with lukewarm water.

**Tea and coffee:** Stretch the stained area of your cloth on the top of a container and pour through water as hot as the type of cloth can endure. If the type of cloth is suitable, wash it with lye.

**Chocolate and cocoa:** Soak the item in cold water and rub with soap or detergent, wash it in the highest temperature that the type of cloth can endure. If there is still a stain left, wipe with oxygenated water (in proportion of 3%).

**Tomato paste:** After scraping the dried pieces without ruining the cloth, leave in cold water for about 30 minutes and wash by rubbing with detergent.

**Meat/soup/egg:** Eliminate the dried stain residues and wipe with a sponge or soft cloth dampened with cold water. Rub with detergent and wash with diluted lye.

**Grease and oil stains:** First wipe the residues. Rub the stain with detergent and then wash with lukewarm soapy water.

**Mustard:** First apply glycerine to the stained area. Rub with detergent and then wash. If the stain still does not disappear, wipe with alcohol (On synthetic and coloured cloth, a mixture of 1 part alcohol, 2 parts water should be used).

## Practical Information

**Blood stain:** Soak the item in cold water for 30 minutes. If the stain still does not disappear, soak in a mixture of water and ammonia (3 table-spoons of ammonia in 4 litres of water) for 30 minutes.

**Cream, ice-cream and milk:** Soak the item in cold water and rub the stained area with detergent. If the stain has still not disappeared, apply diluted lye on the fabric. (Do not use lye on coloured clothes.)

**Mould:** Mould stains should be cleaned as soon as possible. The stain should be washed with detergent, and if it does not disappear, it should be wiped with oxygenated water (in proportion of 3%).

**Ink:** Hold the stained area under cold water and wait until the inky water completely runs off. Then rub with lemon juice and detergent diluted in water, wash after waiting for 5 minutes.

**Fruit:** Stretch the stained area of the item on the top of a container and pour cold water on it. Do not pour hot water on the stain. Wipe with cold water and apply glycerine. Wait for 1-2 hours and rinse after wiping with a few drops of white vinegar.

**Grass stain:** Rub the stained part with detergent. If the type of fabric is suitable for use of lye, wash it with lye. Rub your woollen items with alcohol. (For colour, use a mixture of 1 part pure alcohol and 2 parts of water).

**Oil Paint:** The stain should be eliminated before it dries by applying thinner on it. Then it should be rubbed with detergent and washed.

**Burnt stain:** If your cloth is suitable for use of lye, you can add lye into your washing water. For woollens, a cloth damped in oxygenated water should be covered on the stain and it should be ironed with a dry cloth on it. It should be washed after rinsing well.

# Display and Failure Codes

Your machine is equipped with diagnostic systems which monitor wash progress and will intervene to protect the washer dryer in the event of a fault.

Failure Code	Probable failure	The process to be done
E01	The door is not shut properly.	Shut the door properly so that you hear the click then press the "Start" button. If the error persists, unplug the machine, close the water tap and contact CDA Customer Care.
E02 or 	Water cut off or low water pressure.	Make sure the tap is turned on and water pressure is normal. If water is turned off switch the programme selector knob to the "0" position, turn water on and then re-select programme. Check the inlet hose is not kinked. Check the water inlet filters are not blocked. If the error persists, unplug the machine, close the water tap and contact CDA Customer Care.
E03 or 	Pump is damaged, pump filter is clogged or pump electrical connection is faulty.	Clean the pump filter. If the error persists, unplug the machine, close the water tap and contact CDA Customer Care.
E04	Water level excessive	Unplug the machine, close the water tap and contact CDA Customer Care.

# Troubleshooting

All repairs which must be done on the machine should only be performed by authorised service agents. When a repair is required for your machine or you are unable to eliminate the failure with the help of the information given below:

- Unplug the machine.
- Close the water tap.
- Contact CDA Customer Care.

Fault	Probable cause	Methods of elimination
The machine will not start.	It is unplugged.	Insert the plug into the socket.
	The fuse is damaged.	Replace the fuse.
	There is a fault with the power supply.	Check the power supply.
	The washer door is not properly closed.	Close the washer door.
	“Start” button has not been pressed.	Press the “Start” button.
	“Programme selector” knob is not set correctly.	Set the “Programme selector” knob correctly.
The machine does not fill with water.	“Start” button has not been pressed.	Press the “Start” button.
	Water tap is not turned on.	Turn on the water tap.
	Water pressure too low.	Check water pressure.
	The inlet hose is kinked.	Check the inlet hose.
	Water supply failure.	Check the water supply.
	“Programme selector” knob not set correctly.	Set the “Programme selector” knob correctly.
	Washer door not properly closed.	Close the washer door properly.
	Inlet hose filter is blocked.	Unblock the inlet hose filter.
The machine is draining while being filled.	The height of drain hose is too low.	Install drain hose at the specified height.
	The drain hose is in water.	Ensure the drain hose end is not immersed in water.

Fault	Probable cause	Methods of elimination
The machine is not draining water.	The drain hose is obstructed or bent.	Check the drain hose.
	The pump filter is obstructed.	Clean the pump filter.
The machine is vibrating.	Not all transit bolts have been removed.	Remove all the transit bolts.
	The machine is located on an uneven surface or is not levelled.	Ensure the machine is located on an even surface and is correctly levelled.
	There is only a small load in the machine.	This is not indicative of a fault.
	The washer dryer is overloaded, or badly loaded.	Do not exceed the load capacity, and ensure the clothes are loaded evenly.
	The washer dryer is leaning on a solid object.	Ensure the machine is installed away from other objects.
No water appears in the drum during washing.	Not a fault. Water should remain below the level of the door/window.	N/A.
The machine stops before completing its wash cycle.	Water or electricity failure.	Check the power and water supplies.
Operation stops for a period of time.	Washer dryer gives an error message.	Check display codes.
Excessive foam in the drum.	The detergent is not a low foaming type.	Check if the detergent is suitable.
	Excessive amount of detergent used.	Reduce amount of detergent used.
The machine fails to spin.	Unbalanced load.	Add more clothes or try running the spin cycle again.
Laundry has detergent residues on it.	Non-dissolving particles of some detergents may adhere to your washing.	Perform an extra rinsing operation using the "Rinse" programme. Alternatively, brush the particles off the washing after it is dry.

# Installation

All four transit bolts, located at the rear of the appliance, must be removed prior to using the appliance to prevent damage.


Cover the bolt holes with the plastic plugs supplied.

**Do not throw the transit bolts away.  
If you need to move the washer dryer  
after installation you should first  
replace the transit bolts and spacers.**

Do not install your machine on rugs or similar surfaces.

For your machine to work quietly and without any vibration, it should be installed on a flat, non-slippery and solid surface.

Never put cartons, wooden blocks or similar materials under the machine to level the surface under the appliance.

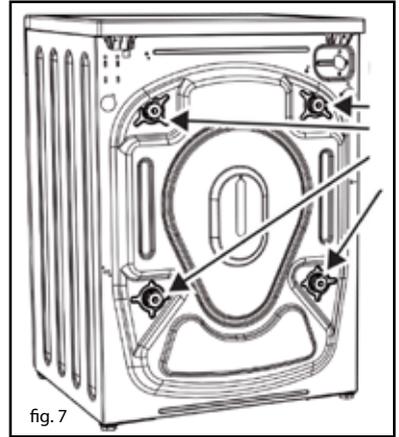

## Levelling

To reduce the noise from the washer dryer and to prevent unnecessary movement and vibration during use, ensure the washer dryer is level, using the adjustable feet.

First, fix and level the rear feet. When they are properly fixed, secure the plastic locknut tightly against the underside of the washer dryer.

- Put the washer dryer into its required position.
- Then level the front feet in the same way as the rear feet.

**Please note: Raising the washer dryer too high can affect the stability of the appliance.**


# Connecting to the Mains Water Supply

- Fit the seal included in the hose packing at the end of the water inlet hose on the tap side.
- Connect the water inlet hose to a ¾" BSP water tap. Then securely tighten the connecting nut by hand.
- After connections are completed, check there are no leaks from the connection joints by turning on your tap completely.

**For your washer dryer to work properly, the mains water pressure must be between 0.05 and 1MPa (0.1 - 10 bar).**

# Drainage Connection

- It is recommended that you have a fixed drainage outlet 50 to 80 cm from the floor.
- Avoid the drain hose being too tight, kinked or restricted.
- The water outlet can either be connected to a water drain or to a sink outlet spigot. This connection should be a minimum of 50cm and a maximum of 80cm from the floor. The drain hose should be no longer than 4m in length to ensure good performance from the washer dryer.
- After connecting the water supply, check to ensure there are no leaks.

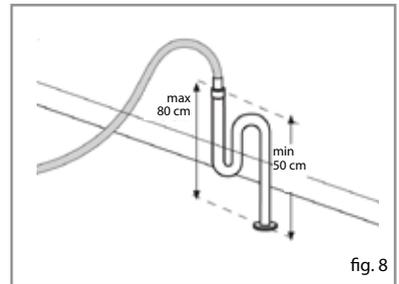


**The drain hose must be securely fastened to the outlet to prevent any risk of the drain hose becoming detached and causing flooding.**

Once the appliance is connected to the water supply and the drain connection, ensure that the water inlet and drain hoses are not folded, twisted, crushed or elongated by stretching when moving the appliance into position.

## Electrical Information

Warning! This appliance must be earthed.

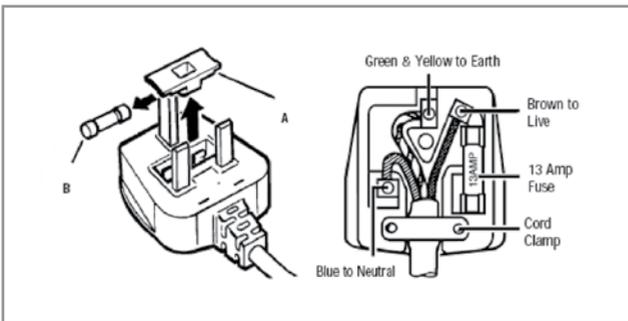

The mains lead of this appliance has been fitted with a BS 1363A 13 Amp fused plug. To change a fuse in this type of plug, follow the steps below:

1. Remove the fuse cover and fuse.
2. Fit a replacement 13A fuse, ASTA approved to BS 1362 type, into the fuse cover.
3. Replace fuse cover.

**Important:** Do not use the appliance without the fuse cover in position.

## How to connect an alternative plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of safely to prevent the risk of electric shock. A suitable alternative plug of at least 13 Amp rating to BS 1363 should be used.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

- The wire which is coloured **GREEN and YELLOW** must be connected to the terminal which is marked with the letter **(E)** or by the **Earth** symbol  or coloured **GREEN and YELLOW**.
- The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **(N)**, or coloured **BLACK**.
- The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **(L)** or coloured **RED**.

If in doubt regarding the electrical connection of this appliance, consult a qualified electrician. Do not shorten the supply cable, the appliance may require removing for servicing.

N.B. Ensure that the plug socket is situated in an easily accessible place.

## Technical Specifications

Maximum dry washing capacity (kg)	8
Maximum drying capacity (kg)	6
Height (cm)	84.5
Width (cm)	59.7
Depth (cm)	58.2


# International Washing Symbols

			
Washing temperature	Do not wash in a washing machine	Lukewarm iron	Medium hot iron


			
Hot iron	Do not iron	Do not tumble dry	Hang to dry

			
Drip dry	Dry flat	Do not bleach	Handy to bleach

		
<p>All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent to be used. Garments bearing these symbols should not be washed in your machine unless the label says otherwise.</p>		

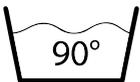


Wash up to 90 °C

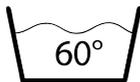

Wash up to 60 °C



Wash up to 30 °C

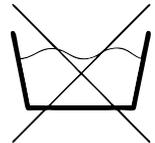

Do not wash in a washing machine

---

## NOTES

---

## NOTES



Please contact our Customer Care Department for Service on the details below.

**Customer Care Department • The ICDAI Group Ltd. • Harby Road • Langar • Nottinghamshire • NG13 9HY**  
**T : 01949 862 012 F : 01949 862 003 E : [customer.care@cda.eu](mailto:customer.care@cda.eu) W : [www.cda.eu](http://www.cda.eu)**