

# WF140

# Freestanding Dishwasher

Installation, Use and Maintenance



## Important

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

This appliance is not designed to be used by people (including children) with reduced physical, sensorial or mental capacity, or who lack experience or knowledge about it, unless they have had supervision or instructions on how to use the appliance by someone who is responsible for their safety.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

### **Appliance information:**

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

Appliance Model	
-----------------	--

Serial Number	
---------------	--

This appliance has been designed for domestic use only. Commercial use will invalidate the warranty.

### **CE Declarations of Conformity:**


This appliance has been designed, constructed and marketed in compliance with safety requirements of EEC Directives 2004/108/EC, 2006/95/EC, IEC436/DIN44990, EN 50242

### **Availability of this manual in an alternative format:**

A soft copy of this manual is available for download from [www.cda.eu](http://www.cda.eu).

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must be taken to a special local authority waste collection centre or to a dealer providing appliance recycling services.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health. It also enables the constituent materials to be recovered, saving both energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin .

## Important

- Read the instructions prior to installation and use of the appliance.
- Do not lean or climb on the open dishwasher door, to prevent damage.
- Close the dishwasher door after use to prevent accidents.
- Use only detergents, salt and rinse aid specifically designed for dishwashers.
- Do not put solvents in the dishwasher detergent compartment to prevent risk of explosion
- Only put dishwasher safe items into the dishwasher. If in doubt, check with the manufacturer of the items.
- Take care when loading the dishwasher to observe the recommendations for best loading practice, and also to ensure that sharp objects such as knives are placed blade down to prevent accidents.
- Do not open the dishwasher door when a programme is running. If it is necessary to do so, then open it only slightly to allow the dishwasher to pause the programme and prevent any water spilling out. Remember that the water in the dishwasher can be very hot when the programme is running.
- When the dishwasher is not in use, we recommend that you turn off the water supply at the supply tap and disconnect the main supply.
- If you are leaving the dishwasher for an extended period you should leave the door slightly open to prevent the formation of unpleasant smells.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


## Recommendations

- To reduce energy and water consumption, remove all dirt residues from the dishes prior to loading the dishwasher.
- Only run the dishwasher when fully loaded.
- Place hollow items (bowls, glasses and pans) face down in the basket.

## Before First Use

- Set the water softener level as required by the water hardness in the area.
- Add 1kg of salt into the salt compartment and then fill with water to the top of the salt compartment.
- Remove all the packaging materials from the interior of the dishwasher.
- Fill the rinse aid compartment.
- Run a hot programme without any dishes in the dishwasher.

# Control Panel

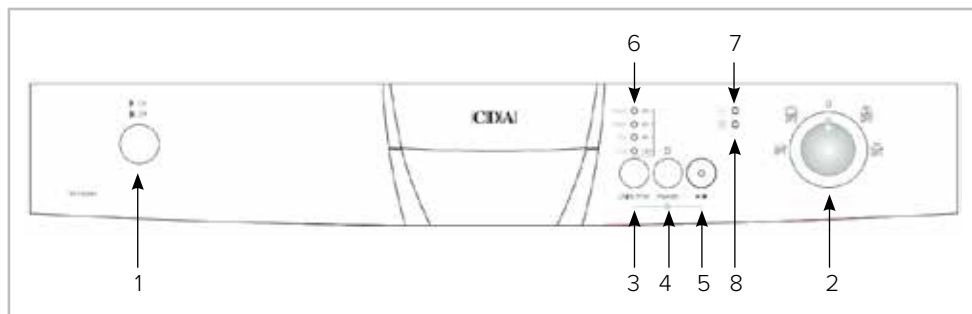

- 1 - Power button
- 2 - Programme Selection dial
- 3 - Delay Timer button
- 4 - Prewash button
- 5 - Start/Pause button
- 6 - Delay Timer/Progress Indicator lights
- 7 - Rinse Aid Warning light
- 8 - Salt Warning light

## Starting a programme

- Press the “Power” button (1) to switch the dishwasher on.
- Turn the “Programme Selection” dial (2) until the required programme is indicated.
- If required, press the “Delay Timer” button (3) repeatedly to set the programme.
- If required, press the “Prewash” button (4).
- Ensure the dishwasher door is closed.
- Press the “Start/Pause” button (5) to begin the programme.

If possible, do not open the dishwasher door once the programme has started.

## Using the delay timer

The dishwasher is equipped with a variable delay timer of three, six, nine or twelve hours duration.

- To set the delay timer, press the “Delay Timer” button (3). This will switch on the delay timer for three hours, and the 3h light will illuminate.
- To change the duration, press the “Delay Timer” button again until the light next to the required time (6h, 9h or 12h) is illuminated.
- To cancel the timer, press the “Delay Timer” button again until none of the “Delay Timer” indicator lights are illuminated.

As the delay timer counts down, the “Delay Timer” indicator lights (6) will illuminate in turn, for example at six hours delay the 6h light will illuminate, and at three hours delay the 3h light will illuminate.

## Using the prewash function

The dishwasher is equipped with a prewash function to rinse off residues prior to a full programme.

- To run a prewash programme on its own, first press the “Power” button, then press the “Prewash” button and then press the “Start/Pause” button.
- To run the extra-intensive programme, first press the “Power” button, then press the “Prewash” button, select the intensive programme with the “Programme Selection” dial and then press the “Start/Pause” button.

## Progress indicator lights

The “Progress Indicator” lights (6) illuminate in turn to show the progress of the programme. The light for end of programme will remain illuminated until the power is switched off.

## Changing a programme in progress

- Press the “Start/Pause” button.
- Once the programme has stopped, turn the “Programme Selection” dial to the required programme and press the “Start/Pause” button again.

## Cancelling a programme in progress

- Press the “Start/Pause” button.
- Turn the “Programme Selection” dial to “0”, then press the “Start/Pause” button again. The dishwasher will drain for approximately thirty seconds, and the end “Progress Indicator” light will illuminate once the programme is cancelled.



---

## **Switching the dishwasher off**

- Once the end progress indicator light illuminates, the dishwasher can be switched off by pressing the Power button.
- Then turn off the water tap and remove the plug from the power socket.

Please note: The dishwasher will automatically continue on the programme it has started if the door is opened and closed or in the event of a power cut.

# Detergent

## To fill the detergent compartment


1. Push the latch to open the compartment.
2. Add the required amount of detergent.

The main detergent compartment (b in Fig. 1) has lines to allow for specific amounts of detergent.

These are marked at either 15cm<sup>3</sup> or 25cm<sup>3</sup>, depending on how dirty the dishes are.

If your dishes are in need of an intensive wash, then add 5cm<sup>3</sup> of detergent into the prewash section of the compartment (a in Fig 1).

3. Then close the detergent compartment lid until the latch locks.

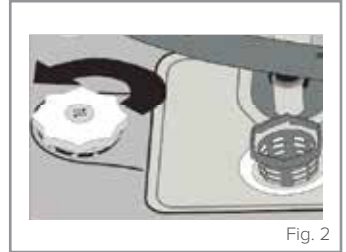

**Please note: You should only use detergents designed specifically for use in dishwashers.**

If using dishwasher tablets, always use the detergent compartment, do not put them in the main body of the dishwasher or in the cutlery basket. The solubility of dishwasher tablets can vary depending on the temperature and duration of the programme. As a result, it is recommended that powder detergents should be used in the shorter programmes to allow better performance.

CDA recommends the use of separate detergent, rinse aid and dishwasher salt rather than combination tablets as separates achieve better wash performance.

If you do use combination detergents, add salt and rinse aid to the dishwasher and then adjust the water hardness setting and rinse aid setting to the minimum. When you then use separate detergents again, you should fill the salt and rinse aid compartments, adjust the water hardness setting to the maximum and run an empty wash, then adjust the water hardness setting and the rinse aid setting to the appropriate level.

## Salt

To ensure the best efficiency, the dishwasher needs soft water. Hard water means that lime residues remain on the dishes and the interior of the dishwasher, affecting performance. The softener system is designed to remove the ions that make the water hard to provide the best quality wash performance. This is achieved by using dishwasher salt.

### **To add dishwasher salt**

1. Remove the lower dishwasher basket and then unscrew the salt compartment cap, as shown in Fig. 2.
2. Fill the compartment with dishwasher salt (do not use table salt), carefully to prevent unnecessary spillage. Before first use, you should fill the compartment with 1kg of dishwasher salt and then fill up the salt compartment with water (up to the brim of the compartment) as shown in Fig. 3.


3. Replace the cap and the lower basket.

**When the “Salt Warning” light on the control panel illuminates, you should refill the salt compartment with salt only – do not add water to the salt compartment after the first use.**

**You should run a programme immediately after adding dishwasher salt, to prevent any damage to the dishwasher systems.**

## Softener Adjustment

The efficiency of your dishwasher depends on the softness of the tap water. To ensure best efficiency, the dishwasher is equipped with a system that reduces the hardness in the mains water supply. The efficiency will increase when the system is correctly set. To find out the water hardness level of your water supply you can use the test strip supplied or alternatively contact your local water board.

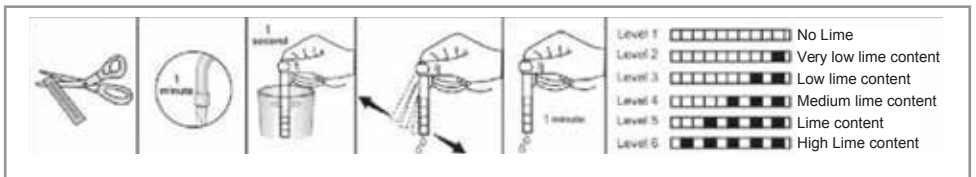

1. Open the testing strip.
2. Run water through the tap for one minute.
3. Hold the testing strip in water for one second.
4. Shake the testing strip after taking it out of the water.
5. Wait for one minute.
6. Check the number of marks on the strip to see the level of water hardness.

If the hardness of the water you use is above 63dE or if you are using well water; you are recommended to use filter and water refinement devices.

**Please note: The level of water hardness is preset to level 3.**

1. Turn the “Programme Selection” dial to zero (reset) when the dishwasher is switched off.
2. Press and hold in the “Start/Pause” button.
3. Whilst holding in the “Start/Pause” button, switch on the dishwasher using the “Power” button.
4. Release the “Start/Pause” button once the indicator lights have flashed.

The indicators will show the last selected water hardness setting.



5. To adjust to the level required, press the “Start/Pause” button until the indicators show the correct level.
6. To save the set level, press the “Power” button again.

Water hardness level	British hardness dE	Indicator lights illuminated
1	0-6	Wash light
2	7-14	Rinse light
3	15-21	Dry light
4	22-28	End light
5	29-39	Wash and end lights
6	40-63	Rinse and end lights

# Rinse Aid

To fill the rinse aid compartment

1. Open the rinse aid compartment by turning and removing the cap as shown in Fig. 4.
2. Fill the rinse aid compartment until the rinse aid indicator goes dark, as shown in Fig. 5 (where “a” indicates the compartment is empty, and “b” indicates the compartment is full).
3. Replace the cap, ensuring the markers on the cap line up with the compartment prior to screwing the cap back in place.

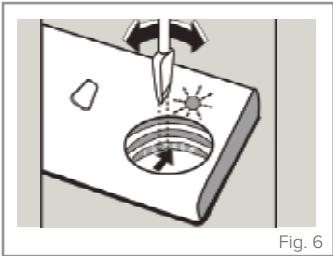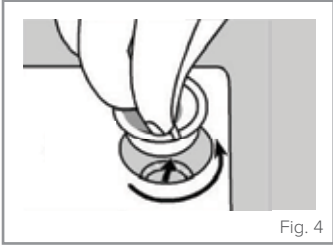

# Rinse Aid Adjustment

The level of rinse aid use is preset to 4. You can adjust the level of rinse aid use by adjusting as shown in Fig. 6.

If water stains form on the dishes after a wash, the level should be increased.

If blue stains which can be wiped away are left on the dishes after a wash, the level should be decreased.



**Please note: Rinse aid ensures better quality wash results and increased drying performance.**

**Always refill the rinse aid when the rinse aid indicator light on the control panel is illuminated.**

## Dishwasher Baskets


To adjust the height of the upper basket:

1. Open the basket retaining clips, as shown in Fig. 7, by turning them to the side.
2. Remove the upper basket, and relocate the alternate set of wheels on the runner, as shown in Fig. 8, pushing the basket back into place.
3. Close the basket retaining clips.

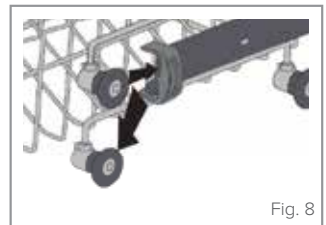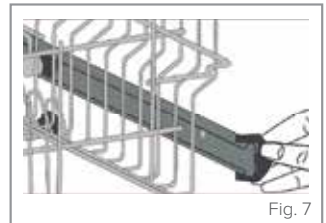


The images below are designed as guidance as to best practice for loading the dishwasher.


Upper basket

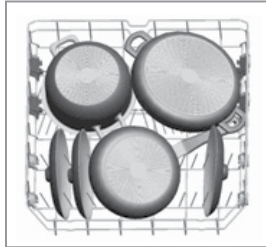

Lower basket

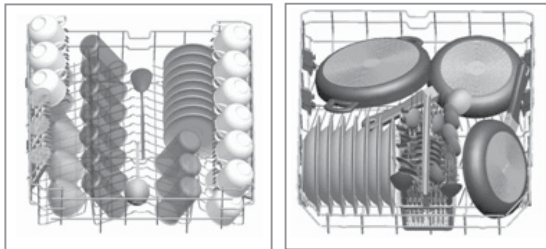

Poorly stacked loads

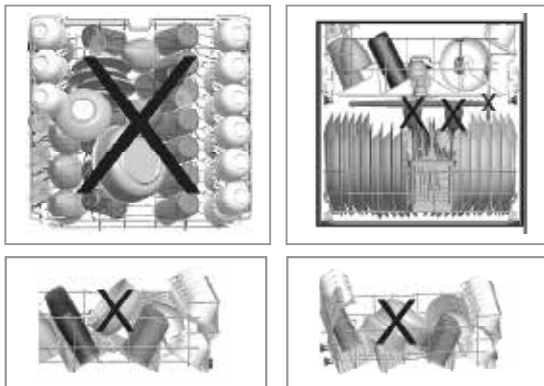



# Standard Loading and Test Data

## Capacity




- Upper and lower baskets: 12 place settings.
- The upper basket should be adjusted to high position.
- Cups should be placed onto the dish rack pins.

## Detergent / Rinse aid

- 5 + 25cm<sup>3</sup>, in accordance with EN50242-DIN 44990 IEC 436 (international norms) / Rinse aid dosage adjustment: 5.


## Programme test

- Eco 50°C, in accordance with EN50242 (international norms.).

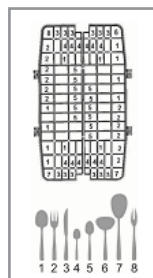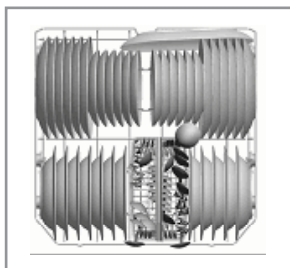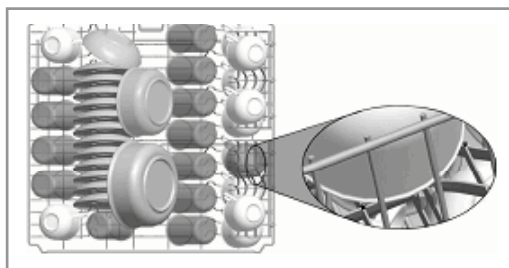

# Programme Listing

Programme names and temperatures	Prewash No Heat	Quick 40°C Wash	Eco 50° Wash	Super 50min 65° Wash	Intensive 65° Wash	Extra Intensive - Prewash & Intensive
<b>Type of food waste</b>	Prewash to rinse and loosen residue awaiting full load, then select a programme	Coffee, milk, tea, cold meats, vegetables, not kept for long	Coffee, milk, tea, cold meats, vegetables, not kept for long	Soups, sauces, pasta, eggs, pilaf, potato and oven dishes, fried foods	Soups, sauces, pasta, eggs, pilaf, potato and oven dishes, fried foods	Soups, sauces, pasta, eggs, pilaf, potato and oven dishes, fried foods
<b>Level of soil</b>	-	Low	Medium	Medium	High	High
<b>Detergent amount</b> A: 5cm <sup>3</sup> B: 25cm <sup>3</sup> / 15cm <sup>3</sup>	-	B	A + B	A + B	A + B	A + B

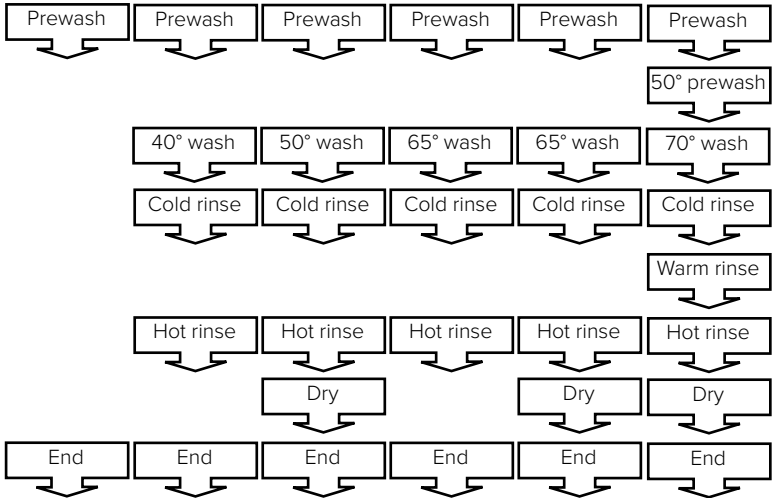

<b>Programme duration (min)</b>	15	30	165	50	117	161
<b>Electricity consumption (kWh)</b>	0.02	0.90	1.00	1.35	1.55	2.00
<b>Water consumption (litres)</b>	4.5	12.4	12.0	12.7	17.2	25.7

---

**Warning: Short programmes do not include a drying stage.**

The values and times provided opposite have been obtained under laboratory conditions according to relevant standards.

This information can change depending on the conditions of the dishwasher's use and environment (network voltage, water pressure, water input temperature and environment temperature).

# Care and Maintenance

Before beginning any care or maintenance, you should always disconnect the appliance from the electricity supply, and also turn off the water supply.




## Door seals

Wipe the dishwasher door seals regularly with a damp cloth to remove any residues.

## Filters

You should clean the filters at least once a month.

1. Remove the lower basket.
2. Turn the micro-filter anticlockwise and then lift it out (Fig. 9).
3. Remove the coarse filter from the micro-filter (Fig. 10).
4. Remove the base filter from the dishwasher compartment (Fig. 11).  
You should clean and rinse the filters thoroughly before replacing all the sections in reverse order to that above. The micro-filter should lock into place once it is secure (Fig. 12).

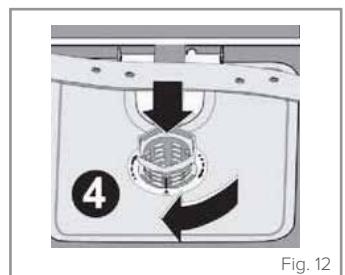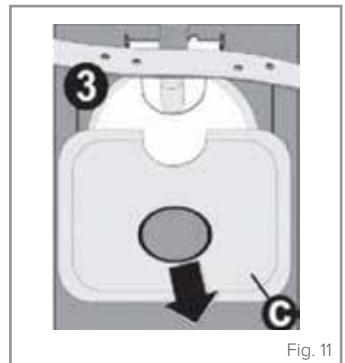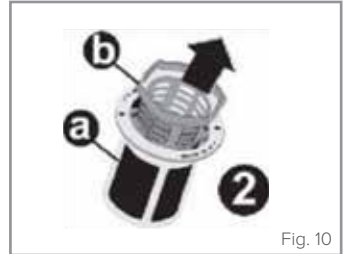

**Please note: Never run a programme without the filters in place. Incorrect fitting of the filters may reduce wash performance and potentially damage your appliance.**

## **Spray arms**

You should clean the spray arms at least once a month.

1. Remove the lower basket.
2. Pull the lower spray arm upwards to remove it.
3. To remove the upper spray arm, first remove the nut on the upper spray arm by turning it as in Fig. 9. You should clean and rinse the spray arms thoroughly before replacing them. Ensure that the upper spray arm nut is securely tightened when refitting the upper spray arm.



















## **Dishwasher interior**

To deal with an accumulation of dirt, oil or limescale in the dishwasher, run an intensive programme with detergent when the dishwasher is empty.

Alternatively, there are specialist dishwasher cleaners available that can be used.

# Fault Codes

The programme indicators also serve as a diagnostic display to help in the event of a problem with the appliance.


Error code					Error description	Advice
Wash	Rinse	Dry	End	Start/Pause		
					Inadequate water supply	Make sure the water inlet tap is fully open. Close the water tap, separate the water inlet hose from the tap and clean the filter. Restart your machine and contact CDA service if the error continues.
					Continual fill error	Close the tap and contact CDA service.
					The waste water in the machine cannot be discharged.	Drain hose is blocked. The filters of your machine might be blocked. Restart the dishwasher and cancel the programme. If the error continues contact CDA service.
					Heater error	Contact CDA service.
					Alarm is active against water overflow	Turn off the dishwasher and disconnect from the water supply. Contact CDA service.
					Faulty electronic card	Contact CDA service.
					Overheating error (temperature in the machine is too high.)	Contact CDA service.
					Faulty heater sensor	Contact CDA service.

# Troubleshooting

Problem	Possible cause
The programme will not start	<p>Check the plug, fuse and circuit breakers of the mains supply.</p> <p>The water tap is turned off.</p> <p>The dishwasher door is not fully closed.</p> <p>The water inlet filter or the machine filters are blocked.</p>
Water remains inside the dishwasher at the end of a programme	<p>The water drain hose is blocked or kinked.</p> <p>The filters are blocked.</p>
The dishwasher stops in the middle of a programme	<p>Power failure.</p> <p>Water inlet failure.</p> <p>Programme is on standby.</p>
Wash performance is of a low standard	<p>Poor loading of dishes hinders wash performance.</p> <p>Insufficient detergent added.</p> <p>Inappropriate wash programme selected.</p> <p>Spray arm is blocked.</p> <p>Filters clogged or incorrectly fitted.</p> <p>Water drain pump is blocked.</p>
White stains on the dishes	<p>Insufficient detergent added.</p> <p>Rinse aid setting is too low.</p> <p>Insufficient dishwasher salt added.</p> <p>Water softener setting is too low.</p> <p>Salt compartment cap may not be completely closed.</p>
The dishes are not completely dry at the end of a programme	<p>A programme without a drying stage was selected.</p> <p>Rinse aid setting is too low.</p> <p>Dishes unloaded too soon (allow time for drying).</p>
There are rust stains on the dishes	<p>Different sets of cutlery should be kept separate.</p> <p>Too much salt (water softener setting is too high).</p> <p>Salt compartment cap not completely closed.</p> <p>Poor appliance earth (check mains electrical supply).</p>
The door is not opening or closing properly	<p>Door tension not correctly adjusted for the decor door.</p>

# Electrical Information

**Warning! This appliance must be earthed.**

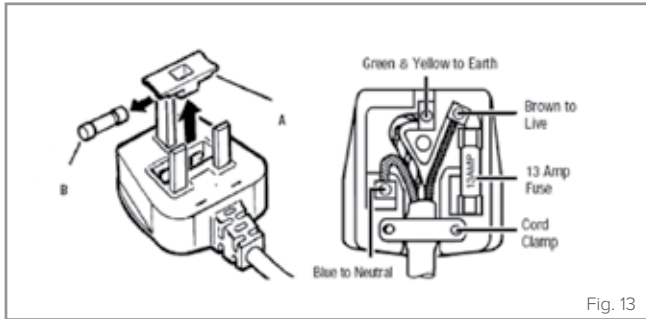

The mains lead of this appliance has been fitted with a BS 1363A 13 amp fused plug. To change a fuse in this type of plug, follow the steps below:

1. Remove the fuse cover and fuse.
2. Fit replacement 13A fuse, ASTA approved to BS 1362 type, into the fuse cover.
3. Replace fuse cover.

**Important: Do not use the appliance without the fuse cover in position.**

## How to connect an alternative plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of safely to avoid the risk of electric shock. A suitable alternative plug of at least 13Amp rating to BS 1363 should be used.



---

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

- The wire which is coloured GREEN and YELLOW must be connected to the terminal which is marked with the letter (E) or by the Earth symbol  $\perp$  or coloured GREEN and YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter (N) or coloured BLACK or BLUE.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter (L) or coloured RED or BROWN.

If in doubt regarding the electrical connection of this appliance, consult a qualified electrician.

Do not shorten the supply cable, the appliance may require removing for servicing.

**N.B. Ensure that the plug socket is situated in an easily accessible place.**

# Installation

- Do not install this appliance if it is damaged in any way. Installing a damaged appliance may invalidate the warranty.
- The water supply tap should be located in an adjacent cupboard so that it can be accessed after installation.
- Ensure the appliance is level by adjusting the feet as necessary.
- Only use the water inlet supplied with the appliance.
- If the water pressure is above 10 bar, a pressure relief valve should be used.
- After connecting the water supply, check to ensure there are no leaks.
- The water outlet can either be connected to a water drain or to a sink outlet spigot. This connection should be at a minimum of 50cm and a maximum of 110cm from the floor. The drain hose should be no longer than 4m in length to ensure good performance from the dishwasher.

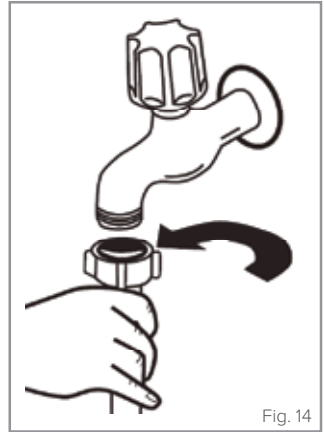


Fig. 14

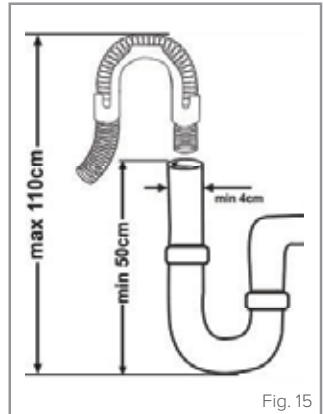


Fig. 15

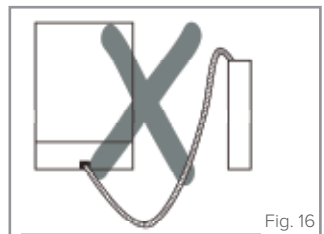


Fig. 16

---

NOTES:



Please contact our **Customer Care Department** for Service on the details below

**Customer Care Department**

The ICDAI Group Ltd. • Harby Road • Langar • Nottinghamshire • NG13 9HY  
T : 01949 862 012 F : 01949 862 003 E : customer.care@cda.eu

